


Code Development for the PIC16C52

CODE DEVELOPMENT PROCEDURE

To develop code on a PIC16C52 device, a PIC16C54/JW part can be used. In order to use a PIC16C54/JW device, the following conditions should be followed:

1. A PIC16C54/JW has 512 bytes (0x1FF) of program memory, whereas a PIC16C52 has 384 bytes (0x17F) of program memory. The "extra" locations should be programmed as follows:
 - a) Location 0x180 should be programmed with a "goto 0x00" instruction
 - b) Locations 0x181 through 0x1FF should be programmed with a "goto 0x17F" instruction.
 See Figure 1 for details, and for a standard "skeleton" program, use the code in Example 1.
2. The PIC16C54/JW has a Watchdog Timer (WDT), while the PIC16C52 does not. Therefore, the WDT on the PIC16C54/JW must be disabled. The "__CONFIG" command used in Example 1 disables the WDT.
3. The PIC16C54/JW has four oscillator modes, while the PIC16C52 has two. Therefore, only RC and XT oscillator modes should be used. The "__CONFIG" command used in Example 1 takes care of programming the XT Oscillator mode, if required.

FIGURE 1: PIC16C54 PROGRAM MEMORY MAP AND STACK

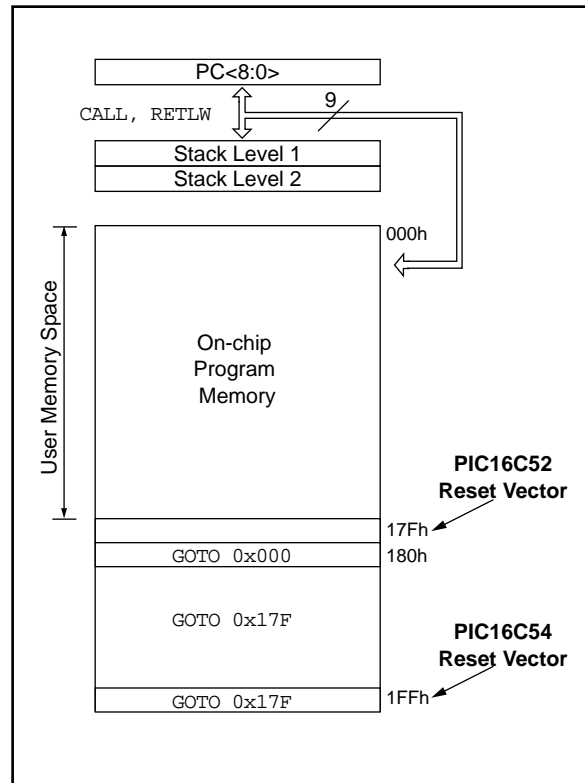

AN641

EXAMPLE 1: CONVERSION CODE

```
;This test file "skeleton" depicts a standard format, which
;a user can use when programming a PIC16C54-JW device to
;"emulate" a PIC16C52, during code development
;
;       list p=16c54, f=inhx8m
;
;include the header file from the correct directory, please
;verify the correct dos path for the header file "P16C5X.INC"
;       include "c:\pictools\mpasm\P16C5X.INC"
;Define the configuration bits. Please note that the PIC16C52
;does not support the WDT, so _WDT_OFF should be selected.
;Also only RC and XT Oscillator modes are supported on the PIC16C52.
;Code protect is supported on the PIC16C52.
;       __CONFIG _WDT_OFF & _XT_OSC      ;for XT mode only
;       ;__CONFIG _WDT_OFF              ;for RC mode
;
;       org      0x00
Start
;User's code should reside from 0x00 to 0x17F
;
;       org      0x17f  ;reset vector for PIC16C52
;
;A "goto Start" instruction is recommended to be programmed at the reset
;vector, however the user may elect to program any code at this
;location.
;
;*****
;The code below MUST be programmed as indicated, in order for a
;PIC16C54-JW to work as a PIC16C52.
;       org      0x180  ;program location not present in PIC16C52
;       goto     0x00   ;roll over to location 0
;fill remaining locations with goto reset vector for PIC16C52
;       FILL     (GOTO 0x17F), (0x1FF - $ + 1)
;
;*****
;       end
```

NOTES:

WORLDWIDE SALES & SERVICE

AMERICAS

Corporate Office

Microchip Technology Inc.
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 602 786-7200 Fax: 602 786-7277
Technical Support: 602 786-7627
Web: <http://www.mchip.com/microchip>

Atlanta

Microchip Technology Inc.
500 Sugar Mill Road, Suite 200B
Atlanta, GA 30350
Tel: 770 640-0034 Fax: 770 640-0307

Boston

Microchip Technology Inc.
5 Mount Royal Avenue
Marlborough, MA 01752
Tel: 508 480-9990 Fax: 508 480-8575

Chicago

Microchip Technology Inc.
333 Pierce Road, Suite 180
Itasca, IL 60143
Tel: 708 285-0071 Fax: 708 285-0075

Dallas

Microchip Technology Inc.
14651 Dallas Parkway, Suite 816
Dallas, TX 75240-8809
Tel: 214 991-7177 Fax: 214 991-8588

Dayton

Microchip Technology Inc.
Suite 150
Two Prestige Place
Miamisburg, OH 45342
Tel: 513 291-1654 Fax: 513 291-9175

Los Angeles

Microchip Technology Inc.
18201 Von Karman, Suite 455
Irvine, CA 92715
Tel: 714 263-1888 Fax: 714 263-1338

New York

Microchip Technology Inc.
150 Motor Parkway, Suite 416
Hauppauge, NY 11788
Tel: 516 273-5305 Fax: 516 273-5335

San Jose

Microchip Technology Inc.
2107 North First Street, Suite 590
San Jose, CA 95131
Tel: 408 436-7950 Fax: 408 436-7955

ASIA/PACIFIC

Hong Kong

Microchip Technology
Unit No. 3002-3004, Tower 1
Metroplaza
223 Hing Fong Road
Kwai Fong, N.T. Hong Kong
Tel: 852 2 401 1200 Fax: 852 2 401 3431

Korea

Microchip Technology
168-1, Youngbo Bldg. 3 Floor
Samsung-Dong, Kangnam-Ku,
Seoul, Korea
Tel: 82 2 554 7200 Fax: 82 2 558 5934

Singapore

Microchip Technology
200 Middle Road
#10-03 Prime Centre
Singapore 188980
Tel: 65 334 8870 Fax: 65 334 8850

Taiwan

Microchip Technology
10F-1C 207
Tung Hua North Road
Taipei, Taiwan, ROC
Tel: 886 2 717 7175 Fax: 886 2 545 0139

EUROPE

United Kingdom

Arizona Microchip Technology Ltd.
Unit 6, The Courtyard
Meadow Bank, Furlong Road
Bourne End, Buckinghamshire SL8 5AJ
Tel: 44 0 1628 851077 Fax: 44 0 1628 850259

France

Arizona Microchip Technology SARL
2 Rue du Buisson aux Fraises
91300 Massy - France
Tel: 33 1 69 53 63 20 Fax: 33 1 69 30 90 79

Germany

Arizona Microchip Technology GmbH
Gustav-Heinemann-Ring 125
D-81739 Muenchen, Germany
Tel: 49 89 627 144 0 Fax: 49 89 627 144 44

Italy

Arizona Microchip Technology SRL
Centro Direzionale Colleoni
Palazzo Pegaso Ingresso No. 2
Via Paracelso 23, 20041
Agrate Brianza (MI) Italy
Tel: 39 039 689 9939 Fax: 39 039 689 9883

JAPAN

Microchip Technology Intl. Inc.
Benex S-1 6F
3-18-20, Shin Yokohama
Kohoku-Ku, Yokohama
Kanagawa 222 Japan
Tel: 81 45 471 6166 Fax: 81 45 471 6122

12/04/95



MICROCHIP

All rights reserved. © 1995, Microchip Technology Incorporated, USA.

Information contained in this publication regarding device applications and the like is intended through suggestion only and may be superseded by updates. No representation or warranty is given and no liability is assumed by Microchip Technology Incorporated with respect to the accuracy or use of such information, or infringement of patents or other intellectual property rights arising from such use or otherwise. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, under any intellectual property rights. The Microchip logo and name are registered trademarks of Microchip Technology Inc. All rights reserved. All other trademarks mentioned herein are the property of their respective companies.